

UMI0028_I

ISP1301 USB OTG Transceiver Eval Kit User's Guide

Semiconductors

February 2003

User's Guide Rev. 1.0

Revision History:

Version	Date	Descriptions	Author
1.0	Feb 2003	First release	David Wang

We welcome your feedback. Send it to wired.support@philips.com.

Philips Semiconductors - Asia Product Innovation Centre
Visit www.semiconductors.philips.com/buses/usb or www.flexiusb.com

PHILIPS

This is a legal agreement between you (either an individual or an entity) and Philips Semiconductors. By accepting this product, you indicate your agreement to the disclaimer specified as follows:

DISCLAIMER

PRODUCT IS DEEMED ACCEPTED BY RECIPIENT. THE PRODUCT IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, PHILIPS SEMICONDUCTORS FURTHER DISCLAIMS ALL WARRANTIES, INCLUDING WITHOUT LIMITATION ANY IMPLIED WARRANTIES OF MERCHANT ABILITY, FITNESS FOR A PARTICULAR PURPOSE, AND NONINFRINGEMENT. THE ENTIRE RISK ARISING OUT OF THE USE OR PERFORMANCE OF THE PRODUCT AND DOCUMENTATION REMAINS WITH THE RECIPIENT. TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO EVENT SHALL PHILIPS SEMICONDUCTORS OR ITS SUPPLIERS BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR OTHER DAMAGES WHATSOEVER (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF BUSINESS PROFITS, BUSINESS INTERRUPTION, LOSS OF BUSINESS INFORMATION, OR OTHER PECUNIARY LOSS) ARISING OUT OF THIS AGREEMENT OR THE USE OF OR INABILITY TO USE THE PRODUCT, EVEN IF PHILIPS SEMICONDUCTORS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

CONTENTS

1.	INTRODUCTION	5
2.	SYSTEM REQUIREMENTS.....	5
3.	CONFIGURATIONS AND SETTINGS.....	6
3.1.	POWER REQUIREMENTS.....	6
3.2.	I ² C MASTER SELECTION	6
3.3.	USB INTERFACE.....	7
3.4.	AUDIO INTERFACE.....	7
3.5.	RESET	7
4.	LOCATION OF MAJOR COMPONENTS	7
5.	TEST PROGRAM I301.EXE	8
5.1.	INTRODUCTION.....	8
5.2.	RUNNING THE TEST PROGRAM.....	9
5.3.	USING MENUS.....	9
5.3.1.	Choose I2C slave address for ISP1301	9
5.3.2.	Reset all registers	9
5.3.3.	List all registers	10
5.3.4.	Read/Write register	10
5.3.5.	Select Mode of Operation.....	11
5.3.6.	Enable/Disable charge-pump.....	11
6.	HARDWARE DESCRIPTION.....	12
6.1.	BLOCK DIAGRAM	12
6.2.	FUNCTIONAL DESCRIPTION	12
6.2.1.	PCF8584 I ² C-bus controller	12
6.2.2.	PC parallel to I ² C converter	12
6.2.3.	HC, DC and OTG core logic interface connector.....	12
6.2.4.	Power manager.....	13
6.2.5.	Audio interface.....	13
7.	CONNECTOR PIN INFORMATION.....	13
7.1.	DB-25 PC PARALLEL PORT CONNECTOR (J10) PIN ASSIGNMENT.....	13
7.2.	8-BIT MICROPROCESSOR INTERFACE 20 X 2 HEADER (J13) PIN ASSIGNMENT.....	13
7.3.	USB OTG CONTROLLER INTERFACE 8 X 2 HEADER (J8 AND J3) PIN ASSIGNMENT	13
8.	SCHEMATICS OF THE EVALUATION BOARD	14
9.	BILL OF MATERIALS.....	17
10.	REFERENCES	18

TABLES

Table 3-1: +5.0 V power selection.....	6
Table 3-2: V_{BAT} and V_{IO} selection	6
Table 3-3: I ² C master selection.....	6
Table 7-1: DB-25 PC parallel port connector (J10) pin assignment.....	13
Table 7-2: 8-bit microprocessor-interface 20 x 2 header (J13) pin assignment ^[1]	13
Table 7-3: OTG Controller interface J8 pin assignment.....	14
Table 7-4: OTG Controller interface J3 pin assignment.....	14
Table 9-1: BOM of the ISPI301 evaluation board.....	17

FIGURES

Figure 1-1: ISPI301 evaluation board PCB layout.....	5
Figure 4-1: Location of major components.....	8
Figure 5-1: Test program main menu.....	9
Figure 5-2: List all registers screen display.....	10
Figure 5-3: Read/Write register screen display.....	11
Figure 5-4: Select Mode of Operation screen display.....	11
Figure 6-1: Block diagram of the ISPI301 evaluation board.....	12

Microsoft and Windows are registered trademarks of Microsoft Corp. Intel is a registered trademark of Intel, Inc. The names of actual companies and products mentioned herein may be the trademarks of their respective owners. All other names, products, and trademarks are the property of their respective owners.

1. Introduction

The ISP1301 is a Universal Serial Bus (USB) On-The-Go (OTG) transceiver device that is fully compliant with *Universal Serial Bus Specification Rev. 2.0* and *On-The-Go Supplement to the USB 2.0 Specification Rev. 1.0*. It integrates a USB full-speed and low-speed transceiver, and other analog components to fully support OTG functionality.

The ISP1301 is ideal for use in portable electronics devices, such as mobile phones, personal digital assistants (PDAs), digital still cameras, and digital audio players. The ISP1301 acts as a physical layer to interface with any USB OTG Controller.

The ISP1301 evaluation board is designed to evaluate the functions of the ISP1301 chip. The main components on the board are: the ISP1301 (in HVQFN24 package), I²C master, USB mini-AB connector, analog audio interface, and USB OTG controller interface. The operation mode of the ISP1301 can be configured through the I²C interface. The OTG status and control registers in the ISP1301 can also be accessed through the I²C interface.

To verify the functions of the ISP1301 by using the DOS test program that is provided with the evaluation kit, connect the ISP1301 evaluation board to the parallel port of a PC. To fully verify the functions of the ISP1301, a USB OTG controller is used to connect to the ISP1301 board through the defined interface connector.

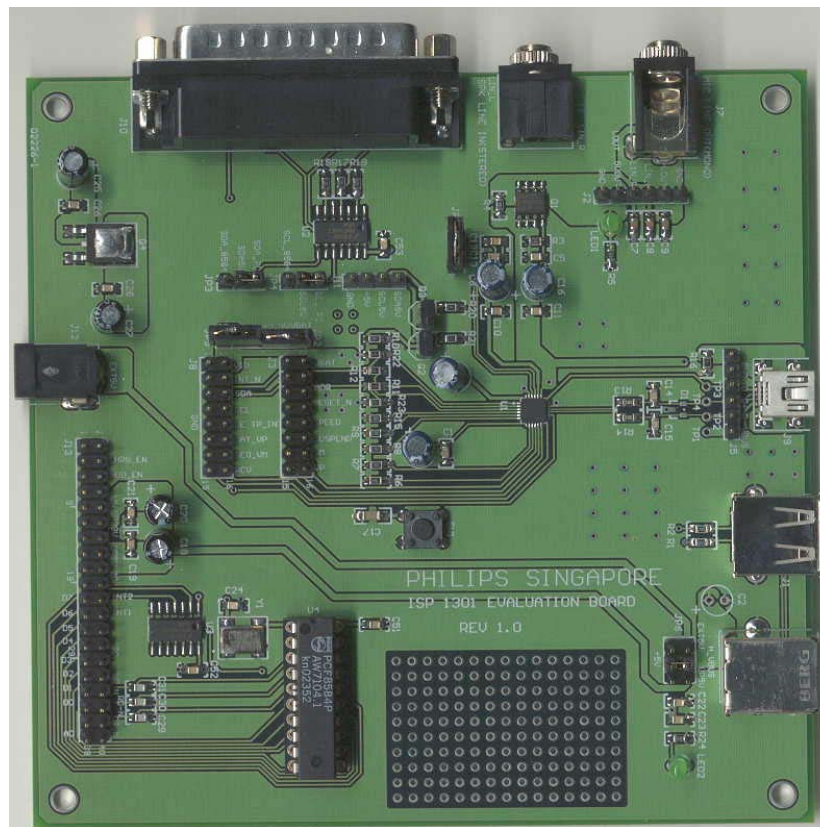


Figure 1-1: ISP1301 evaluation board PCB layout

2. System requirements

An x86 PC with DB-25 parallel port is required. The test program runs on DOS (or the command line in Microsoft® Windows® 98). In the BIOS setting, select port address 378H for the onboard parallel port. The test program is compiled using Turbo® C++ 3.0.

3. Configurations and settings

3.1. Power requirements

By default, the ISPI301 board is powered by a +5.0 V power supply through the DC jack (J12, inner +). The +5.0 V power can also be supplied from the USB Type-B connector (J4). However, when J4 is connected to a USB port on the PC, leave the USB mini-AB connector (J9) unconnected. If an external microprocessor is used to control the I²C controller chip PCF8584 (U4), the +5.0 V power can also be supplied from pin 16 and pin 18 of the microprocessor connector (J13).

When the +5.0 V power is correctly applied to the board, LED2 (green) will turn ON.

Table 3-1: +5.0 V power selection

Jumper	Descriptions
JP6	Short 1 (UP5V) and 2 (+5V): +5.0 V from the microprocessor interface (pin 16 or 18 of J13) Short 3 (H_VBUS) and 4 (+5V): +5.0 V from the V _{BUS} line of the USB connector (pin 1 of J4) Short 5 (EXT5V) and 6 (+5V): +5.0 V from the DC jack (J12, inner +) [default]

The power supply (V_{BAT} pin) for the ISPI301 can be provided either from the onboard +3.3 V source or from the OTG Controller interface (pin 2 of J3).

Similarly, the power supply for the V_{IO} (called V_{DD_LGC} in the ISPI301 datasheet) pin of the ISPI301 can be provided either from the onboard +3.3 V source or from the OTG Controller interface (pin 2 of J8).

Table 3-2: V_{BAT} and V_{IO} selection

Jumper	Descriptions
JP2	Short: V _{BAT} from the onboard +3.3 V source [default] Open: V _{BAT} from the pin 2 of J3
JP5	Short: V _{IO} from the onboard +3.3 V source [default] Open: V _{IO} from the pin 2 of J8

3.2. I²C master selection

The I²C master controller can be supplied from any one of three sources:

- PC parallel port (software I²C master)
- Philips I²C controller chip PCF8584 (hardware I²C master)
- External I²C master that is connected to the I²C header J11.

Table 3-3: I²C master selection

Jumper	Descriptions
JP3	Short 1 (SDA_8584) and 2 (SDA5V): SDA from PCF8584 Short 2 (SDA5V) and 3 (SDA_PC): SDA from PC parallel port [default] Open: SDA from I ² C connector (pin 4 of J11)
JP4	Short 1 (SCL_8584) and 2 (SCL5V): SCL from PCF8584 Short 2 (SCL5V) and 3 (SCL_PC): SCL from PC parallel port [default] Open: SCA from I ² C connector (pin 3 of J11)

Note: SCL and SDA come from the same I²C master.

3.3. USB interface

There are three USB connectors on the ISPI301 evaluation board.

- If an OTG Controller is connected to the ISPI301, the USB port functions as an OTG dual-role device and only the mini-AB connector (J5) will be used.
- If a Host Controller is connected to the ISPI301, the USB port functions as a host and only the Type-A connector (J1) will be used.
- If a Device Controller is connected to the ISPI301, the USB port functions as a device and only the Type-B connector (J4) will be used.

You can use all the three ports at the same time. If you have a system that consists of a USB host port and a separate device port, then the host port can be connected to J4 and the device port can be connected to J1 using the standard USB cable. In such a case, the ISPI301 provides only OTG functions to the system; the transceiver function of the ISPI301 is not used.

3.4. Audio interface

The ISPI301 evaluation board has an interface to support an analog audio carkit application. Connect:

- The audio carkit to the mini-AB connector (J9) on the board;
- The audio input line signal to the SPK LINE IN socket (J6) on the board;
- The audio output line signal to the MIC LINE OUT socket (J7) on the board.

3.5. Reset

For a hardware reset to the ISPI301, press the manual reset switch (SW1). The reset pulse (active LOW) can also come from the OTG Controller interface (pin 8 of J3).

4. Location of major components

Figure 4-1 shows the location of major components on the evaluation board.

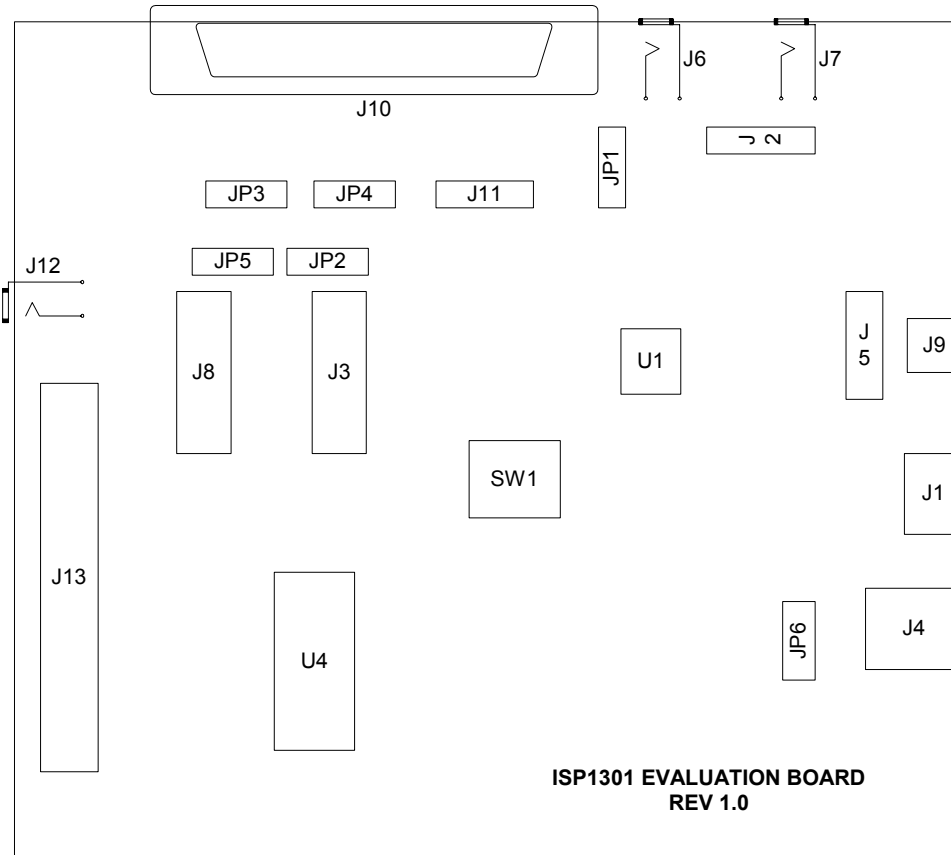


Figure 4-1: Location of major components

5. Test program I301.EXE

5.1. Introduction

A DOS test program "I301.exe" is provided to help you verify the functions of the ISPI301 chip. The program uses the PC parallel port to access the ISPI301 registers through the I²C interface. The program simulates software I²C master at the hardware abstraction layer (HAL).

The test program can do the following:

- Set the I²C slave address for the ISPI301 based on the hardware setting of the ADR pin
- Reset all registers to their default values
- Display the current value of all registers on your PC screen
- Write any value to a writable register
- Set the mode of operation of the ISPI301 (such as, USB function and suspend mode, transparent I²C mode, transparent general-purpose buffer mode, and global power-down mode)
- Enable or disable the charge pump of the ISPI301.

5.2. Running the test program

If your PC boots to pure DOS, run the test program on the command line. If your PC boots to Microsoft Windows 98, open an MS-DOS window and run the test program. It is recommended that you boot the PC to pure DOS.

To run the test program, type **I301**¹ and press the **Enter** key at the command prompt.

Note: In the BIOS setting of the PC, the I/O address for the onboard parallel port is 378H.

5.3. Using menus

After the program has been launched, the main menu will appear on the screen. See Figure 5-1.

```

MS-DOS Prompt - 1301
=====
ISP1301 OTG Xcvr Test Program Ver0.9
(c)2002 Philips Semiconductors - APIC
=====

***** Main Menu *****

1: Choose I2C slave address for ISP1301
2: Reset all registers
3: List all registers
4: Read/Write register
5: Select Mode of Operation
6: Enable/Disable charge-pump

Esc: exit
select:

```

Figure 5-1: Test program main menu

In the main menu screen, selecting any item 1–6 will perform the desired action. If you wish to exit the program, press the **Esc** key.

The following sections describe the menu items.

5.3.1. Choose I2C slave address for ISP1301

The program will prompt you to enter your choice based on the hardware setting of the ADR pin.

- If ADR is HIGH, select 1. The slave address for the ISP1301 will become 0x5A.
- If ADR is LOW, select 0. The slave address for the ISP1301 will become 0x58.

Make sure that choices are done correctly; otherwise, other operations may fail.

If you set the ISP1301 to the transparent I²C mode and choose a slave address value other than the value set here, you must set it back to the original slave address when you revert to the direct I²C mode.

5.3.2. Reset all registers

On selecting this option, the program will set all the registers—excluding the read-only registers—to their default values and display these values on your PC screen.

¹ In this document, items that you type or click are indicated in **bold**.

5.3.3. List all registers

On selecting this option, the program will display all the 22 registers on the screen. See Figure 5-2.

```

MS-DOS Prompt - 1301
Auto
ISP1301 register values:
=====
Address Description          Value  Default value
=====
0x00-01 Vendor ID           0x04CC default = 0x04CC
0x02-03 Product ID         0x1301 default = 0x1301
0x14-15 Chip Version       0x0100 default = 0x0100
0x04/05 Mode Control 1     0x00   default = 0x00
0x12/13 Mode Control 2     0x04   default = 0x04
0x06/07 OTG Control 1      0x0C   default = 0x0C
0x08   Interrupt source     0xA0   default = 0xA0
0x0A/0B Interrupt Latch    0x00   default = 0x00
0x0C/0D Interrupt Enable 0 0x00   default = 0x00
0x0E/0F Interrupt Enable 1 0x00   default = 0x00

Press any key to return to previous menu:_

```

Figure 5-2: List all registers screen display

5.3.4. Read/Write register

The program will display the current value of all registers and prompt you to write to a specific register.

On selecting item 4 from the main menu, the program will display the screen given in Figure 5-3. The program will prompt you to type the address of the register whose value you want to change. On entering the address of the register and pressing Enter, the program will prompt you to enter the new value that you want to assign. If you want to return to the main menu, type **FF** at the command prompt.

```

MS-DOS Prompt - 1301
ISP1301 register values:
=====
Address Description          Value   Default value
=====
0x00-01 Vendor ID           0x04CC default = 0x04CC
0x02-03 Product ID         0x1301 default = 0x1301
0x14-15 Chip Version       0x0100 default = 0x0100
0x04/05 Mode Control 1     0x00   default = 0x00
0x12/13 Mode Control 2     0x04   default = 0x04
0x06/07 OTG Control 1      0x0C   default = 0x0C
0x08   Interrupt Source    0xA0   default = 0xA0
0x0A/0B Interrupt Latch    0xFF   default = 0x00
0x0C/0D Interrupt Enable 0 0x00   default = 0x00
0x0E/0F Interrupt Enable 1 0x00   default = 0x00

Enter register address to write(enter FF to exit): 0x0B
Enter register value to write: 0xFF_

```

Figure 5-3: Read/Write register screen display

5.3.5. Select Mode of Operation

You can select the mode of operation of the ISP1301 by selecting item 5 from the main menu. A submenu will appear on the screen. See Figure 5-4. The possible choices include the USB functional mode (four data encoding and decoding methods), transparent I²C mode, transparent buffer mode, USB suspend mode, and global power-down mode.

Note: If the ISP1301 Engineering Sample I (ESI) (that is, the chip whose version register reads 0x0100, or the chip package is marked #####AX) is mounted on the evaluation board, software cannot wake up the chip, if set to the global power-down mode. Only a hardware reset can wake up the chip.

```

MS-DOS Prompt - 1301
***** Mode Menu *****
1: USB functional Mode
2: Transparent I2C Mode
3: Transparent Buffer Mode
4: USB Suspend Mode Enable/Disable
5: Global Power Down Mode Enable/Disable
6: List Current Mode

Esc: return to previous menu
Select:

```

Figure 5-4: Select Mode of Operation screen display

5.3.6. Enable/Disable charge-pump

If the charge pump in the ISP1301 is disabled, selecting menu item 6 will enable the charge pump. If the charge pump is enabled, selecting menu item 6 will disable it.

6. Hardware description

6.1. Block diagram

Figure 6-1 shows the block diagram of the ISPI301 evaluation board.

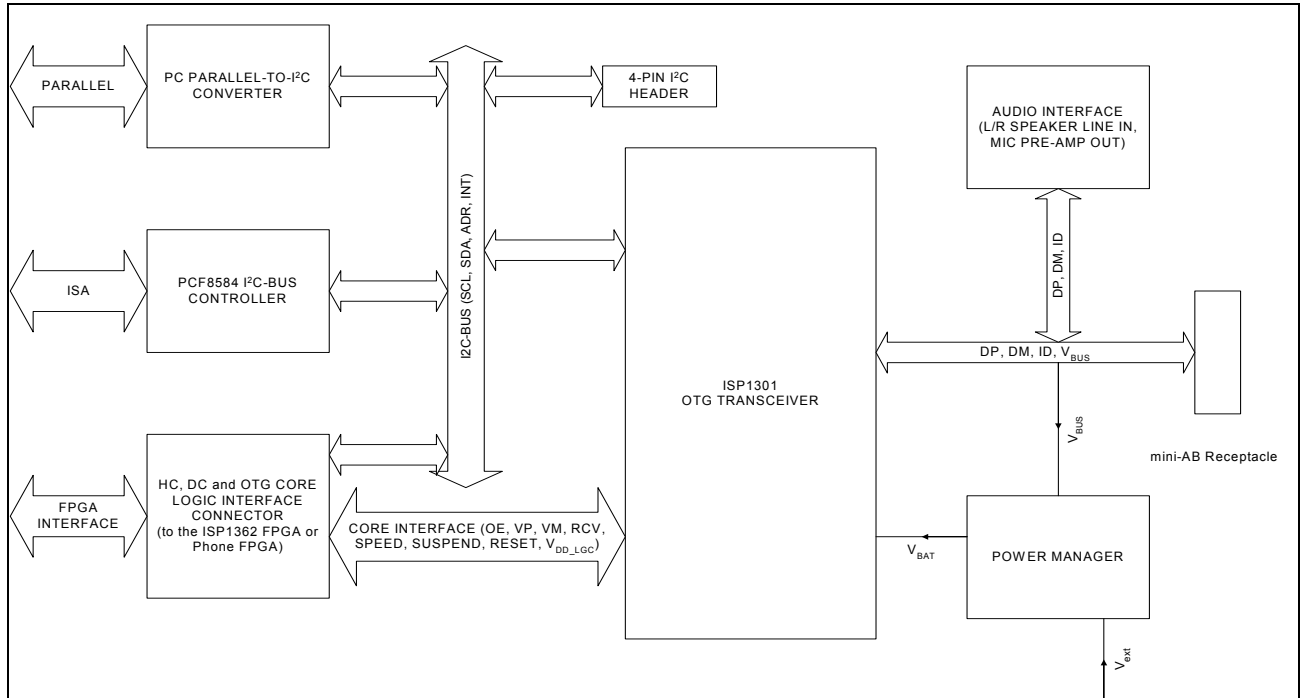


Figure 6-1: Block diagram of the ISPI301 evaluation board

6.2. Functional description

A brief description of each function module is given in the following sections.

6.2.1. PCF8584 I²C-bus controller

This block provides functions of the I²C-bus to the 8-bit parallel-bus converter. It can connect to the Philips ISPI362 or ISPI161x ISA interface board, or any other generic 8-bit microprocessor interface through a 40-wire IDE cable. The PC or other microprocessor can service the interrupt from the ISPI301 and access the registers of the ISPI301 through this interface.

6.2.2. PC parallel to I²C converter

This interface provides an alternative method to access the ISPI301 I²C interface through the PC. The PC needs to emulate software I²C master to access the ISPI301 I²C slave.

6.2.3. HC, DC and OTG core logic interface connector

This interface provides connection to a Host Controller (HC), Device Controller (DC) or On-The-Go (OTG) core logic. This interface is used during OTG system-level evaluation or during compliance testing.

6.2.4. Power manager

This block includes the 5.0 V-to-3.3 V regulator and power source selection.

6.2.5. Audio interface

This block provides stereo audio line IN interface and microphone (with pre-amp) OUT interface. Its main purpose is to demonstrate the carkit application (play audio or voice with carkit).

7. Connector pin information

7.1. DB-25 PC parallel port connector (J10) pin assignment

J10 is used to connect to the PC parallel port through the DB-25 printer cable. Table 7-1 shows its pin assignment.

Table 7-1: DB-25 PC parallel port connector (J10) pin assignment

Pin no	Printer port signal	ISPI301 evaluation board signal
9	D7	SDAOUT#
11	S7#	SDAIN#
15	S3	SCLIN
17	C3#	SCLOUT#
10,13,18–25	—	GND
1–8,12,14,16,	—	No connection

7.2. 8-bit microprocessor interface 20 x 2 header (J13) pin assignment

J13 is used to connect to a generic 8-bit parallel bus microprocessor controller. The bus uses the Intel® mode. Required signals include D0–D7, A0, WR_N, RD_N, CS_N, INT1 and INT2. Table 7-2 shows the pin assignment for J13.

Note: We use a 20 x 2 header to make it compatible with the Philips ISPI362 and ISPI161x ISA interface boards.

Table 7-2: 8-bit microprocessor-interface 20 x 2 header (J13) pin assignment^[1]

Pin no	Pin name	Pin no	Pin name	Pin no	Pin name	Pin no	Pin name
1	GND	11	n. c.	21	D7	31	D2
2	n. c.	12	+3.3 V	22	INT2	32	n. c.
3	n. c.	13	n. c.	23	D6	33	D1
4	CHRG_EN	14	n. c.	24	INT1	34	WR_N
5	n. c.	15	n. c.	25	D5	35	D0
6	n. c.	16	+5.0 V	26	n. c.	36	RD_N
7	n. c.	17	n. c.	27	D4	37	n. c.
8	n. c.	18	+5.0 V	28	n. c.	38	CS_N
9	n. c.	19	GND	29	D3	39	A0
10	+3.3 V	20	n. c.	30	n. c.	40	n. c.

[1] n. c.—Denotes no connection.

Note: An external OTG Controller system can use the CHRG_EN signal to enable or disable +5.0 V from the V_{BUS} line of the mini-AB connector to pin 2 of J2. This is useful when an analog audio carkit is attached and the carkit can charge the external battery.

7.3. USB OTG Controller interface 8 x 2 header (J8 and J3) pin assignment

Header connectors J8 and J3 are used to connect the ISPI301 to the OTG Controller core. J8 includes the USB Serial Interface Engine (SIE) signals—DAT_VP, SE0_VM, RCV and OE_TP_INT_N—and I²C signals—SDA, SCL and INT_N. J3 also includes other signals that may be used by selected OTG Controller.


Table 7-3: OTG Controller interface J8 pin assignment

Pin no	Pin name	Pin no	Pin name
1	GND	9	GND
2	V _{IO}	10	OE_TP_INT_N
3	GND	11	GND
4	INT_N	12	DAT_VP
5	GND	13	GND
6	SDA	14	SE0_VM
7	GND	15	GND
8	SCL	16	RCV

Table 7-4: OTG Controller interface J3 pin assignment


Pin no	Pin name	Pin no	Pin name
1	GND	9	GND
2	V _{BAT}	10	SPEED
3	GND	11	GND
4	n. c.	12	SUSPEND
5	GND	13	GND
6	ADR	14	VM
7	GND	15	GND
8	RESET_N	16	VP

8. Schematics of the evaluation board

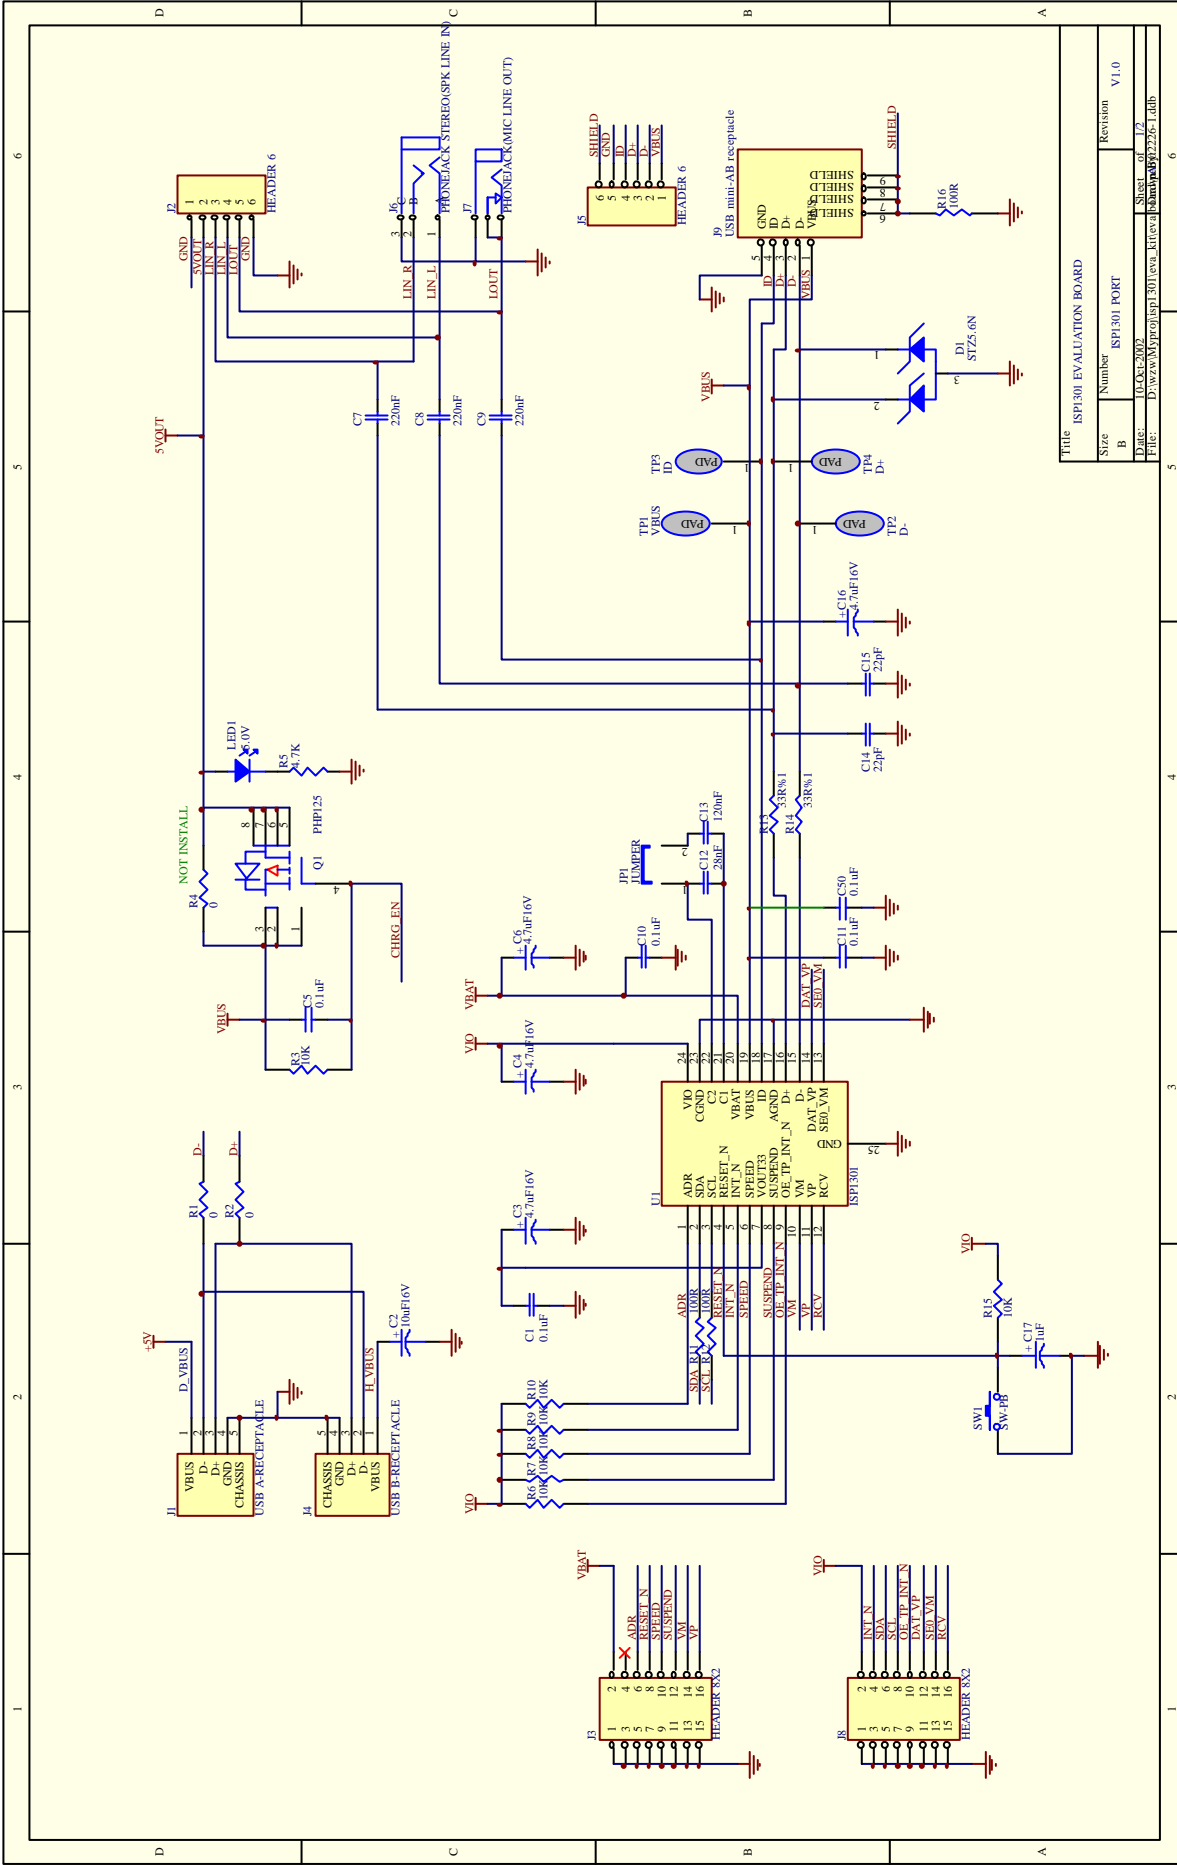

Title: ISP300 EVALUATION BOARD

Size	Number	Revision
B	ISP1001 PORT	V1.0
FILE:	11-03-2007	Sheet 1 of 1
DATE:	21:25:33 (P:\proj\isp300) (eww_kutech) (pennypack) 22727-1.dwg	6

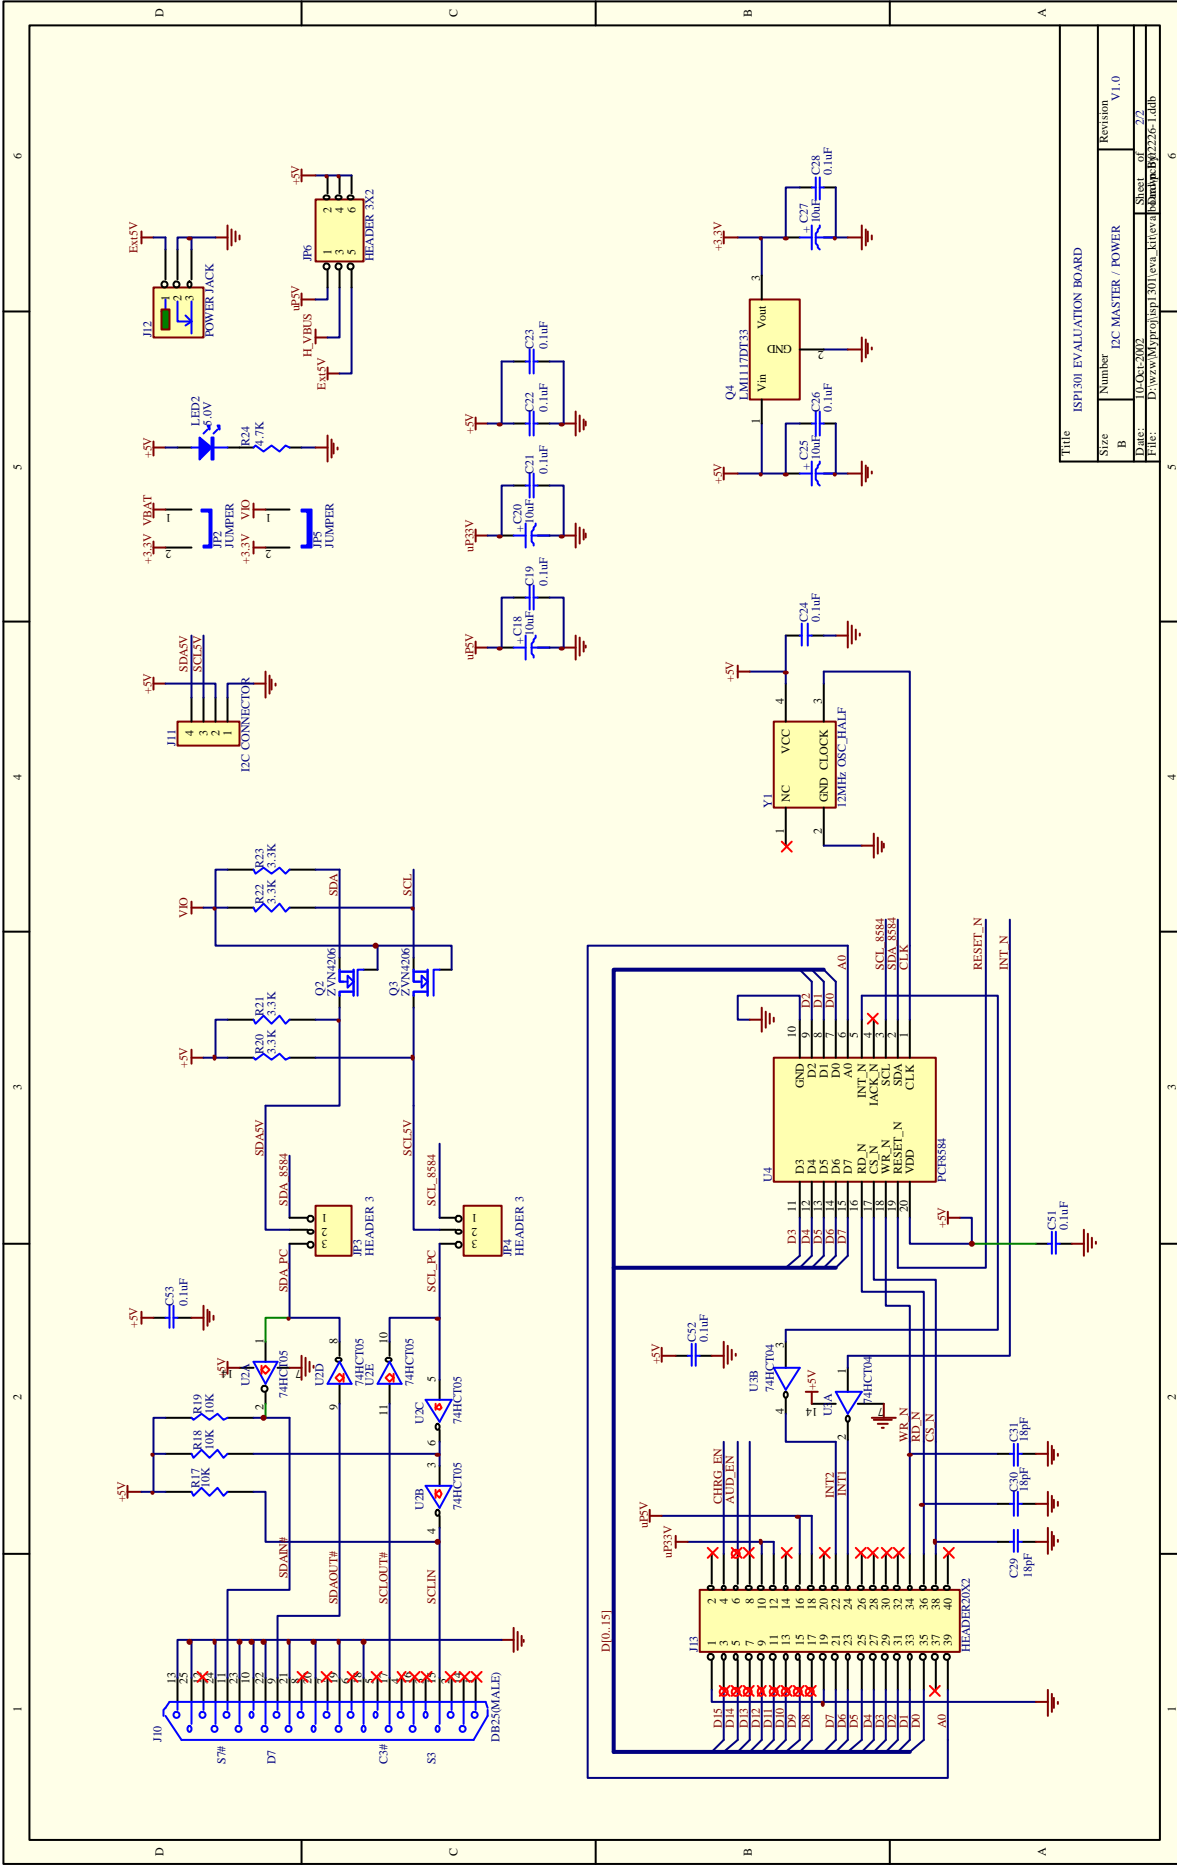

Title			
Size	Number	I2C MASTER / POWER	Revision
B			V1.0
Date:	UCC:2007	Sheet	29
File:	D:\work\byproduct\isp130\evm_kit\pcb\main\isp130_2222_1.dtb	Sheet	29

Title			
Size	Number	I2C MASTER / POWER	Revision
B			V1.0
Date:	UCC:2007	Sheet	29
File:	D:\work\byproduct\isp130\evm_kit\pcb\main\isp130_2222_1.dtb	Sheet	29

Title			
Size	Number	I2C MASTER / POWER	Revision
B			V1.0
Date:	UCC:2007	Sheet	29
File:	D:\work\byproduct\isp130\evm_kit\pcb\main\isp130_2222_1.dtb	Sheet	29

Title			
Size	Number	I2C MASTER / POWER	Revision
B			V1.0
Date:	UCC:2007	Sheet	29
File:	D:\work\byproduct\isp130\evm_kit\pcb\main\isp130_2222_1.dtb	Sheet	29

Title			
Size	Number	I2C MASTER / POWER	Revision
B			V1.0
Date:	UCC:2007	Sheet	29
File:	D:\work\byproduct\isp130\evm_kit\pcb\main\isp130_2222_1.dtb	Sheet	29

Title			
Size	Number	I2C MASTER / POWER	Revision
B			V1.0
Date:	UCC:2007	Sheet	29
File:	D:\work\byproduct\isp130\evm_kit\pcb\main\isp130_2222_1.dtb	Sheet	29

Title			
Size	Number	I2C MASTER / POWER	Revision
B			V1.0
Date:	UCC:2007	Sheet	29
File:	D:\work\byproduct\isp130\evm_kit\pcb\main\isp130_2222_1.dtb	Sheet	29

9. Bill of Materials

Table 9-1: BOM of the ISPI301 evaluation board

Part Type	Quantity	Designator	Footprint
18pF +80%/-20%	3	C29, C30, C31	0805
22pF ±10%	2	C14, C15	0805
28nF ±10%	1	C12	0805
120nF ±10%	1	C13	0805
220nF ±10%	3	C7, C8, C9	0805
0.1uF+80%/-20%	11	C1, C5, C10, C11, C19, C21, C22, C23, C24, C26, C28	0805
1uF+80%/-20%	1	C17	1206
4.7uF16V	4	C3, C4, C6, C16	RB.1/.2
10uF16V	5	C2, C18, C20, C25, C27	RB.1/.2
0R	3	R1, R2, R4	0805
33R ±%1	2	R13, R14	0805
100R	3	R11, R12, R16	0805
3.3K	4	R20, R21, R22, R23	0805
4.7K	2	R5, R24	0805
10K	10	R3, R6, R7, R8, R9, R10, R15, R17, R18, R19	0805
12MHz OSC_HALF	1	Y1	XTAL-CTX
ISPI301	1	U1	HVQFN24
74HCT05	1	U2	SOP14
74HCT04	1	U3	SOP14
PCF8584 I2C CONTROLLER	1	U4	DIP20
PHPI25 P-MOSFET POWER MOS	1	Q1	SO8
ZVN4206 N-MOSFET	2	Q2, Q3	TO92
LMI117DT33 3.3V REGULATOR	1	Q4	TO252
STZ5.6N ESD DIODE	1	D1	SOT346
LED	2	LED1, LED2	Thru'hole
DB25 (MALE)	1	J10	Thru'hole
HEADER 3	2	JP3, JP4	Thru'hole
HEADER 4	1	J11	Thru'hole
HEADER 3X2	1	JP6	Thru'hole
HEADER 6	2	J2, J5	Thru'hole
HEADER 8X2	2	J3, J8	Thru'hole
HEADER20X2	1	J13	Thru'hole
JUMPER	3	JP1, JP2, JP5	Thru'hole
PHONEJACK (MIC LINE OUT)	1	J7	PHONEJACK
PHONEJACK STEREO (SPK LINE IN)	1	J6	PHONEJACK STEREO
POWER JACK	1	J12	DC JACK
SW-PB	1	SW1	SW-TACT
USB A-RECEPTACLE	1	J1	USB A
USB B-RECEPTACLE	1	J4	USB B
USB mini-AB RECEPTACLE	1	J9	USB mini-AB

10. References

- *ISP1301 USB On-The-Go Transceiver* datasheet
- *Universal Serial Bus Specification Rev. 2.0*
- *On-The-Go Supplement to the USB 2.0 Specification Rev. 1.0*
- *ISP1301 Errata*

射频和天线设计培训课程推荐

易迪拓培训(www.edatop.com)由数名来自于研发第一线的资深工程师发起成立,致力并专注于微波、射频、天线设计研发人才的培养;我们于 2006 年整合合并微波 EDA 网(www.mweda.com),现已发展成为国内最大的微波射频和天线设计人才培养基地,成功推出多套微波射频以及天线设计经典培训课程和 ADS、HFSS 等专业软件使用培训课程,广受客户好评;并先后与人民邮电出版社、电子工业出版社合作出版了多本专业图书,帮助数万名工程师提升了专业技术能力。客户遍布中兴通讯、研通高频、埃威航电、国人通信等多家国内知名公司,以及台湾工业技术研究院、永业科技、全一电子等多家台湾地区企业。

易迪拓培训推荐课程列表: <http://www.edatop.com/peixun/tuijian/>



射频工程师养成培训课程套装

该套装精选了射频专业基础培训课程、射频仿真设计培训课程和射频电路测量培训课程三个类别共 30 门视频培训课程和 3 本图书教材;旨在引领学员全面学习一个射频工程师需要熟悉、理解和掌握的专业知识和研发设计能力。通过套装的学习,能够让学员完全达到和胜任一个合格的射频工程师的要求...

课程网址: <http://www.edatop.com/peixun/rfe/110.html>

手机天线设计培训视频课程

该套课程全面讲授了当前手机天线相关设计技术,内容涵盖了早期的外置螺旋手机天线设计,最常用的几种手机内置天线类型——如 monopole 天线、PIFA 天线、Loop 天线和 FICA 天线的设计,以及当前高端智能手机中较常用的金属边框和全金属外壳手机天线的设计;通过该套课程的学习,可以帮助您快速、全面、系统地学习、了解和掌握各种类型的手机天线设计,以及天线及其匹配电路的设计和调试...

课程网址: <http://www.edatop.com/peixun/antenna/133.html>



WiFi 和蓝牙天线设计培训课程

该套课程是李明洋老师应邀给惠普 (HP)公司工程师讲授的 3 天员工内训课程录像,课程内容是李明洋老师十多年工作经验积累和总结,主要讲解了 WiFi 天线设计、HFSS 天线设计软件的使用,匹配电路设计调试、矢量网络分析仪的使用操作、WiFi 射频电路和 PCB Layout 知识,以及 EMC 问题的分析解决思路等内容。对于正在从事射频设计和天线设计领域工作的您,绝对值得拥有和学习!...

课程网址: <http://www.edatop.com/peixun/antenna/134.html>



CST 学习培训课程套装

该培训套装由易迪拓培训联合微波 EDA 网共同推出,是最全面、系统、专业的 CST 微波工作室培训课程套装,所有课程都由经验丰富的专家授课,视频教学,可以帮助您从零开始,全面系统地学习 CST 微波工作的各项功能及其在微波射频、天线设计等领域的设计应用。且购买该套装,还可超值赠送 3 个月免费学习答疑...

课程网址: <http://www.edatop.com/peixun/cst/24.html>



HFSS 学习培训课程套装

该套课程套装包含了本站全部 HFSS 培训课程,是迄今国内最全面、最专业的 HFSS 培训教程套装,可以帮助您从零开始,全面深入学习 HFSS 的各项功能和在多个方面的工程应用。购买套装,更可超值赠送 3 个月免费学习答疑,随时解答您学习过程中遇到的棘手问题,让您的 HFSS 学习更加轻松顺畅...

课程网址: <http://www.edatop.com/peixun/hfss/11.html>

ADS 学习培训课程套装

该套装是迄今国内最全面、最权威的 ADS 培训教程,共包含 10 门 ADS 学习培训课程。课程是由具有多年 ADS 使用经验的微波射频与通信系统设计领域资深专家讲解,并多结合设计实例,由浅入深、详细而又全面地讲解了 ADS 在微波射频电路设计、通信系统设计和电磁仿真设计方面的内容。能让您在最短的时间内学会使用 ADS,迅速提升个人技术能力,把 ADS 真正应用到实际研发工作中去,成为 ADS 设计专家...

课程网址: <http://www.edatop.com/peixun/ads/13.html>



我们的课程优势:

- ※ 成立于 2004 年,10 多年丰富的行业经验,
- ※ 一直致力并专注于微波射频和天线设计工程师的培养,更了解该行业对人才的要求
- ※ 经验丰富的一线资深工程师讲授,结合实际工程案例,直观、实用、易学

联系我们:

- ※ 易迪拓培训官网: <http://www.edatop.com>
- ※ 微波 EDA 网: <http://www.mweda.com>
- ※ 官方淘宝店: <http://shop36920890.taobao.com>